


000077770000

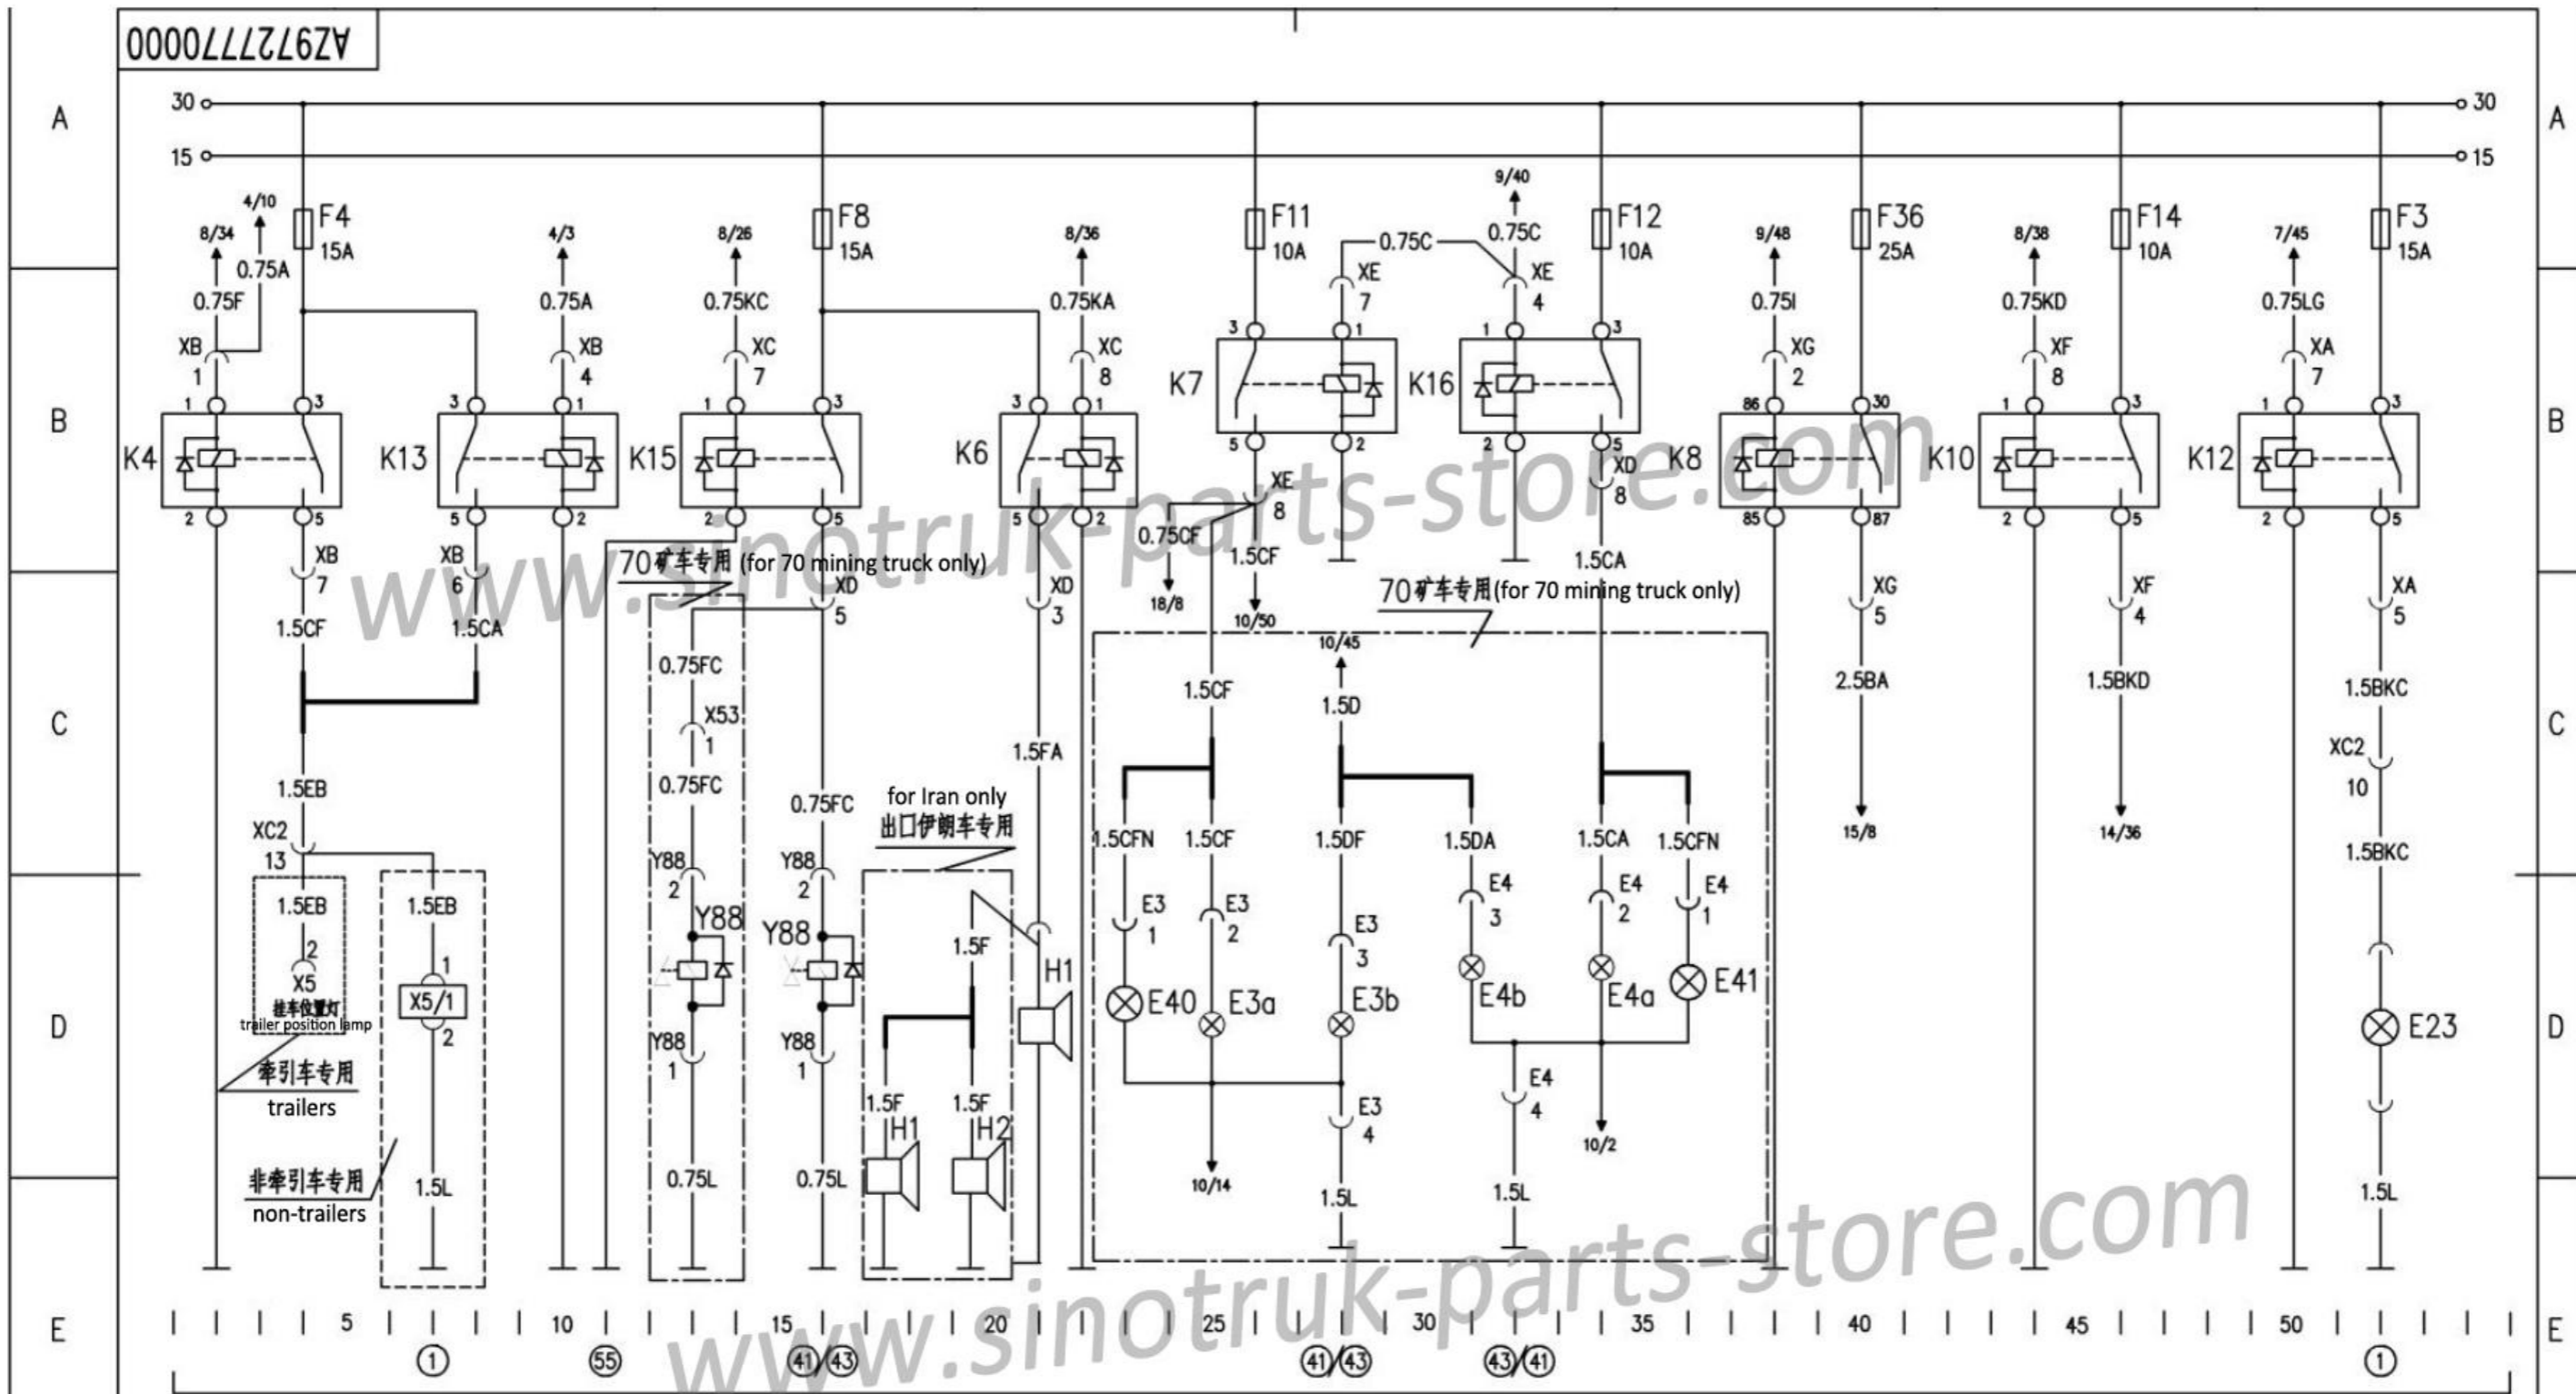

K4	Trailer left position light relay
K6	Electric horn relay
K7	Left high beam relay
K8	Air conditioner power relay
K10	Wiper intermittent relay
K12	Work light relay
K13	Trailer right position light relay
K15	Air horn relay

K16	Right high beam relay
F3	Work light insurance
F4	Trailer right position light insurance
F8	Electric horn, air horn insurance
F11	Left high beam insurance
F12	Right high beam insurance
F14	Intermittent wiper insurance
F36	Air conditioning insurance

Y88	Air horn solenoid valve
H1\H2	Electric horn
E23	Working lamp
X5	7-hole trailer socket
X5\1	Non-tractor position light reserved connector
E3a	Left front high beam
E3b	Left front low beam
E4a	Right front high beam

E4b	Right front low beam
E40	Left auxiliary high beam
E41	Right auxiliary high beam
①	Battery negative
④①	Ground point on the left side of the cab
④③	Grounding point on the right side of the cab
Electrical Box	