


000077770000

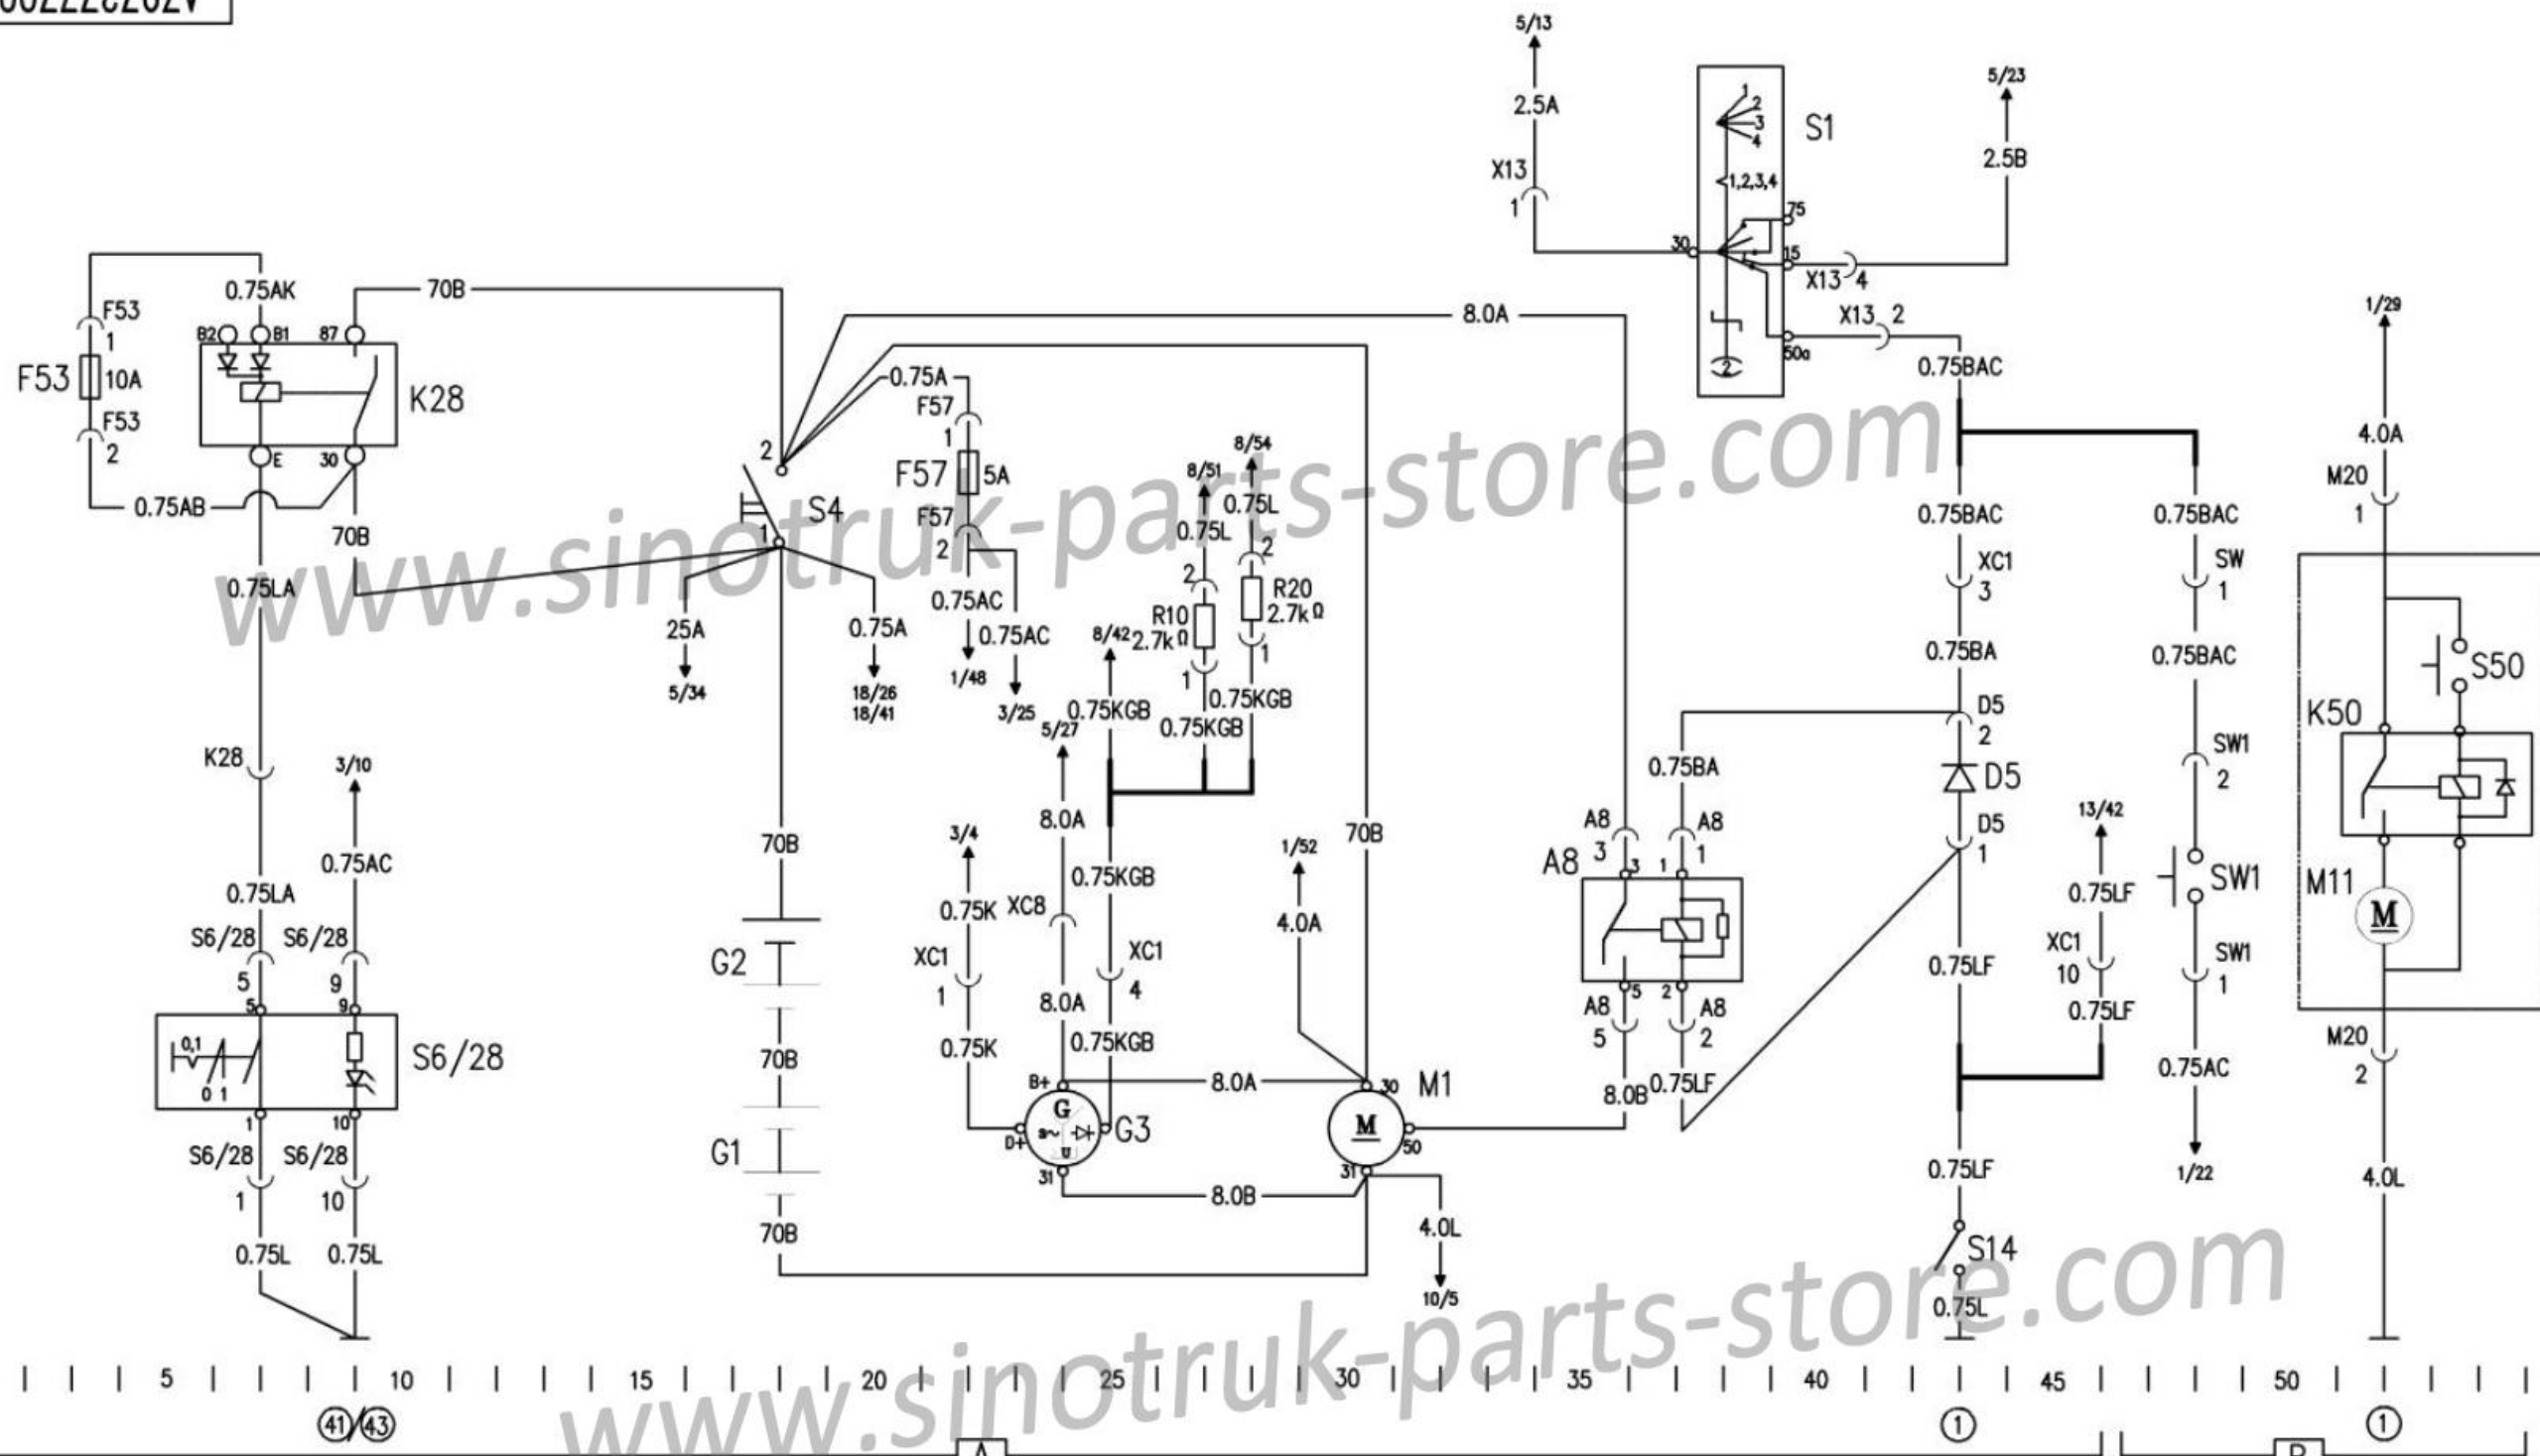

A8	Starter relay
G1\G2	Battery
G3	Alternator
M1	Starter
S1	Key switch
S6\28	Switch
D5	Diode
S4	Mechanical main power switch
K28	Electromagnetic power main switch

S14	Transmission neutral switch
F57	5A safety device
F53	10A safety device
K50	Cab rollover relay
M11	Cab flip motor
S50	Cab lift button switch
SW1	Undercarriage starter switch
R10\R20	2.7K resistor

1	Battery negative
41	Ground point on the left side of the cab
43	Grounding point on the right side of the cab

A	Power, start
B	Under-vehicle starter, electric flip cab